4. Block Diagram

4-1-1 MAIN Part ; HT-DB300

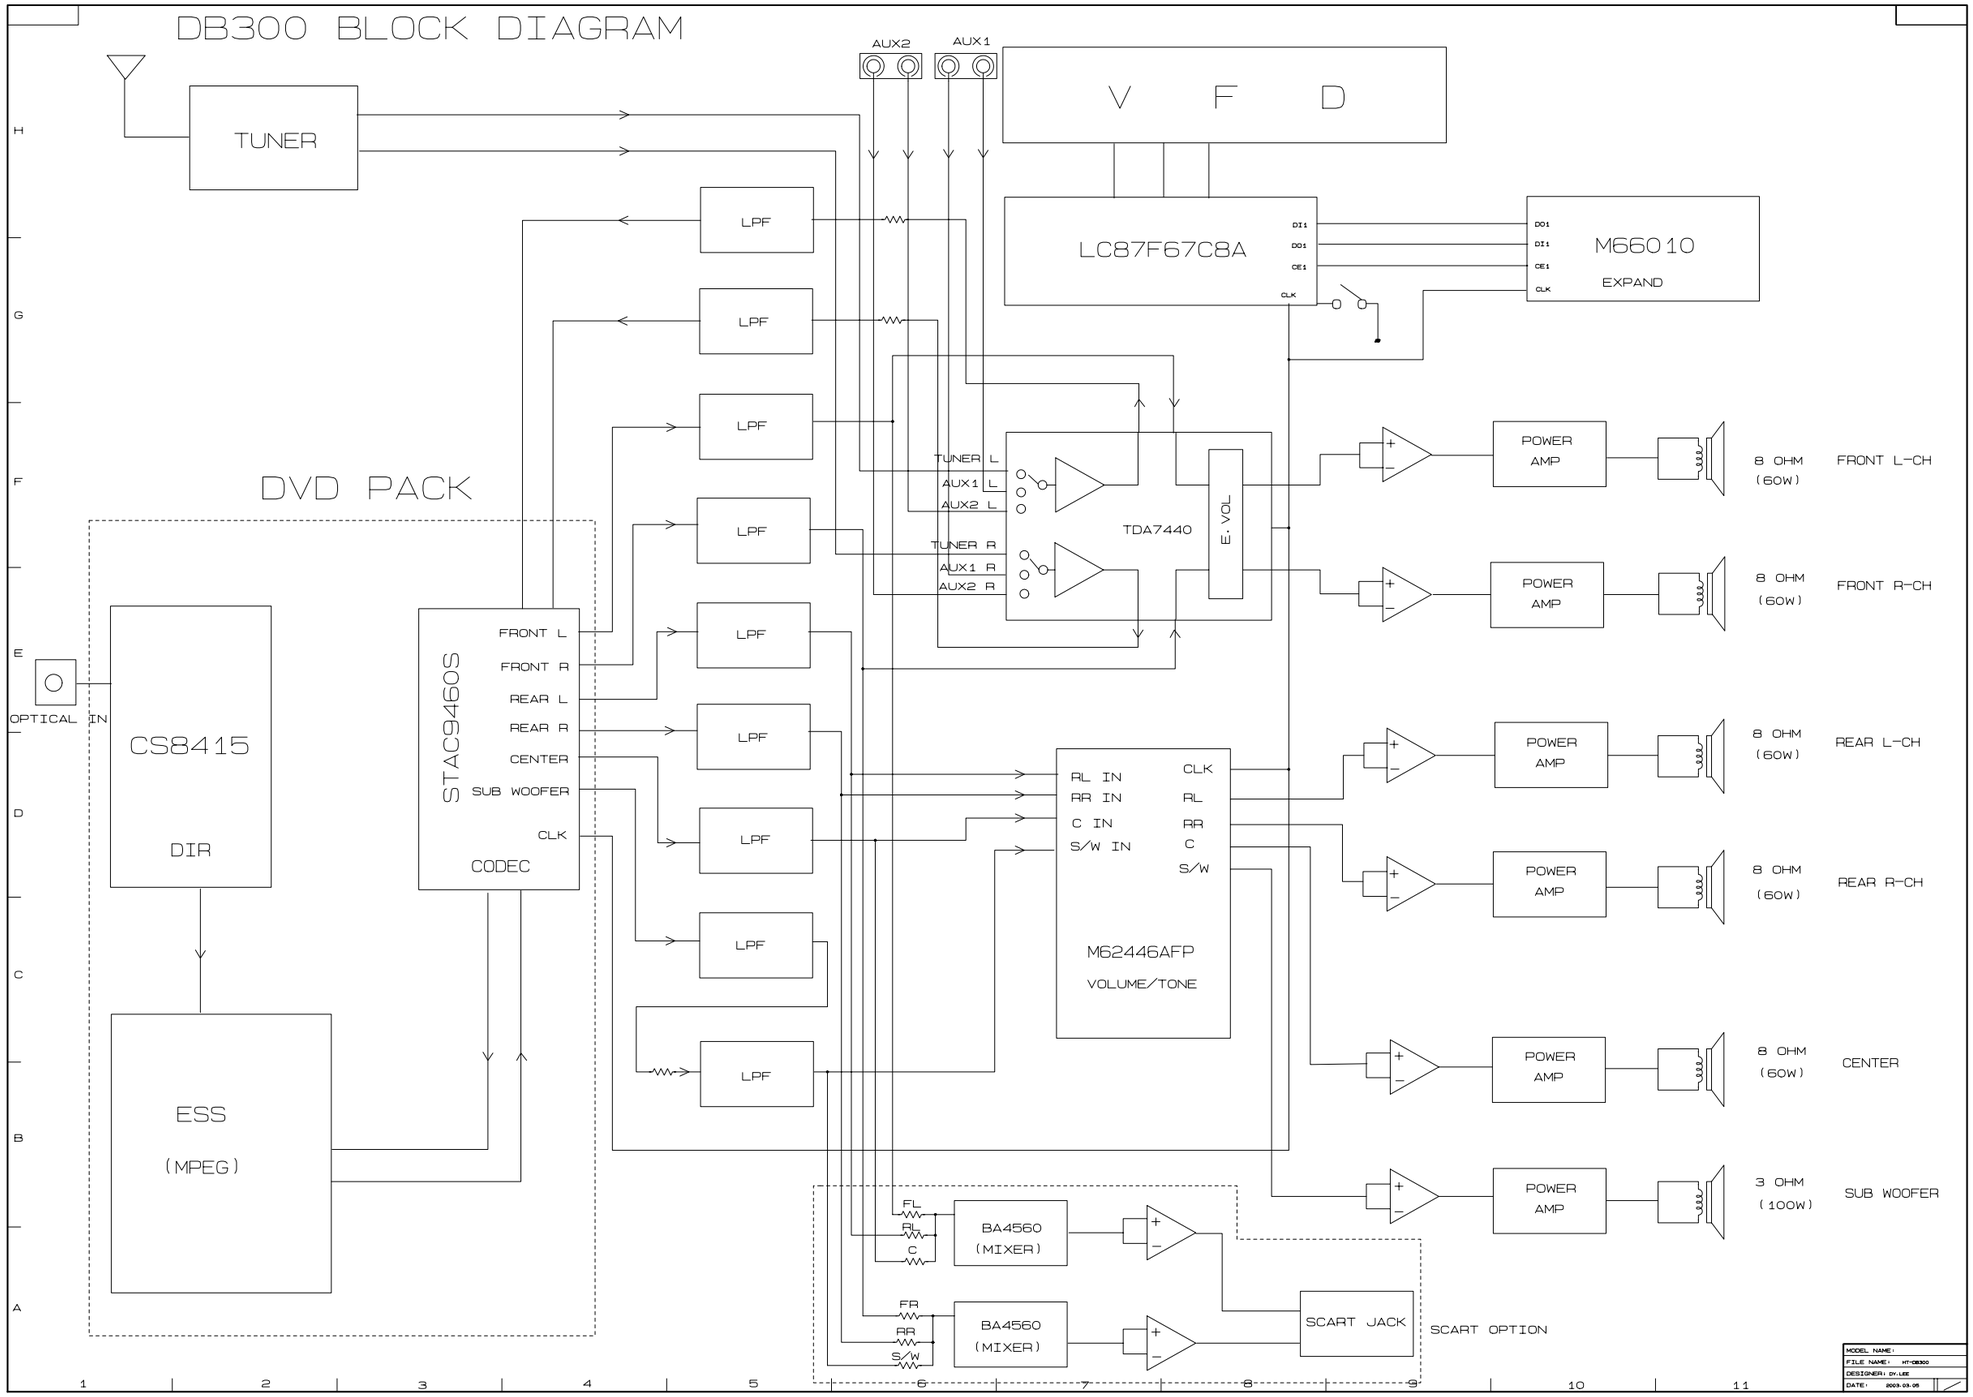

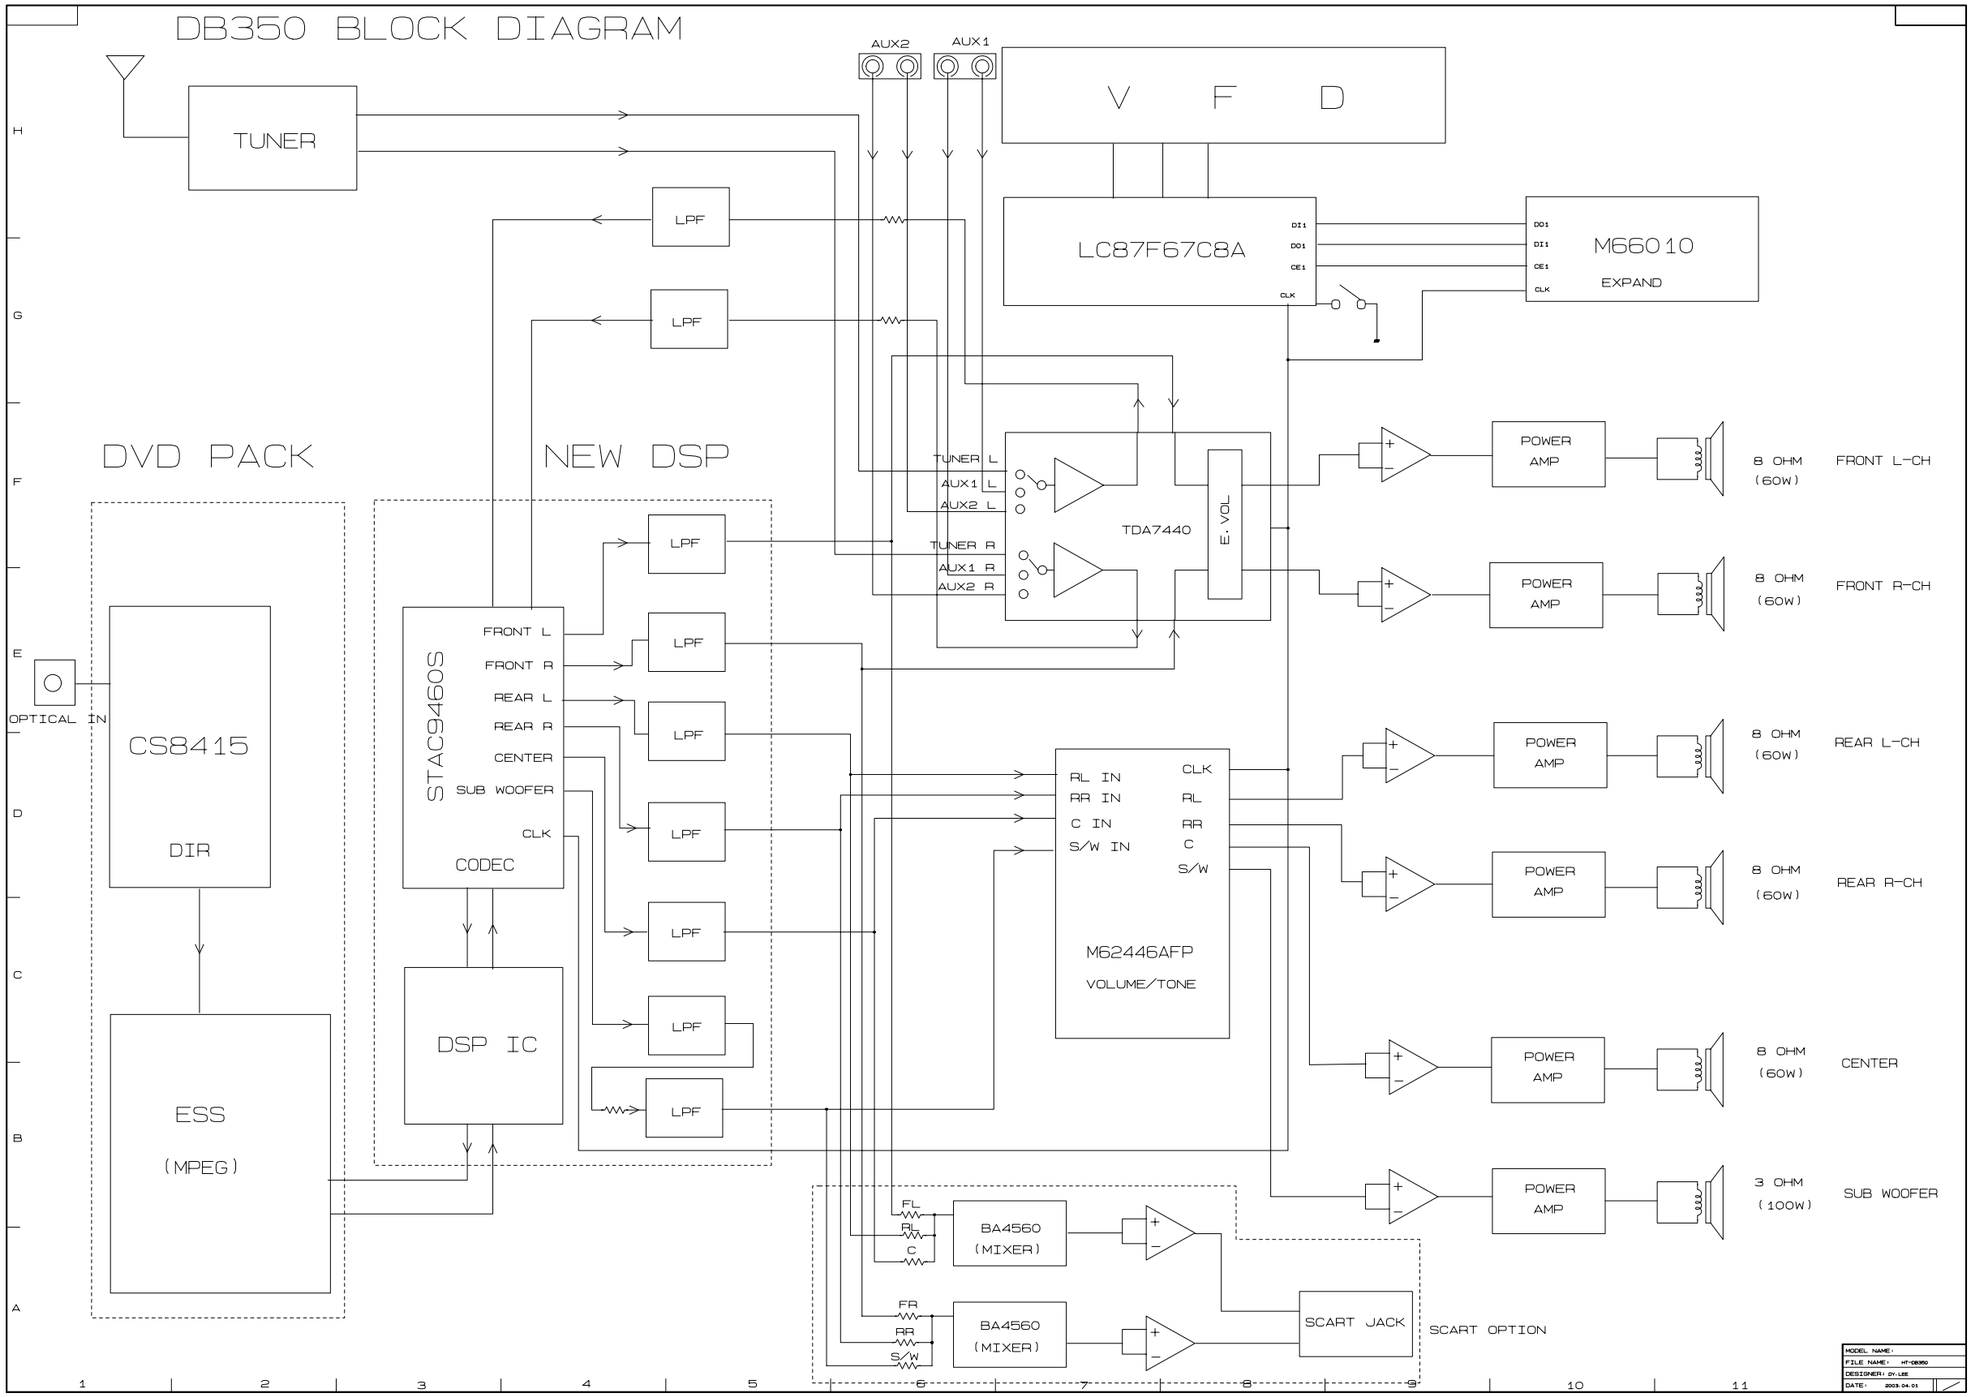
DB350 BLOCK DIAGRAM
TUNER
AUX2
AUX1
V F D
LPF
LC87F67C8A
M66010
EXPAND
DVD PACK
NEW DSP
TUNER L
AUX1 L
AUX2 L
TUNER R
AUX1 R
AUX2 R
TDA7440
E. VOL
POWER AMP
8 OHM (60W)
FRONT L-CH
FRONT R-CH
OPTICAL IN
CS8415
DIR
STAC9460S
FRONT L
FRONT R
REAR L
REAR R
CENTER
SUB WOOFER
CLK
CODEC
DSP IC
ESS
(MPEG)
RL IN
RR IN
C IN
S/W IN
M62446AFP
VOLUME/TONE
REAR L-CH
REAR R-CH
CENTER
3 OHM (100W)
SUB WOOFER
FL
RL
C
FR
RR
S/W
BA4560 (MIXER)
SCART JACK
SCART OPTION
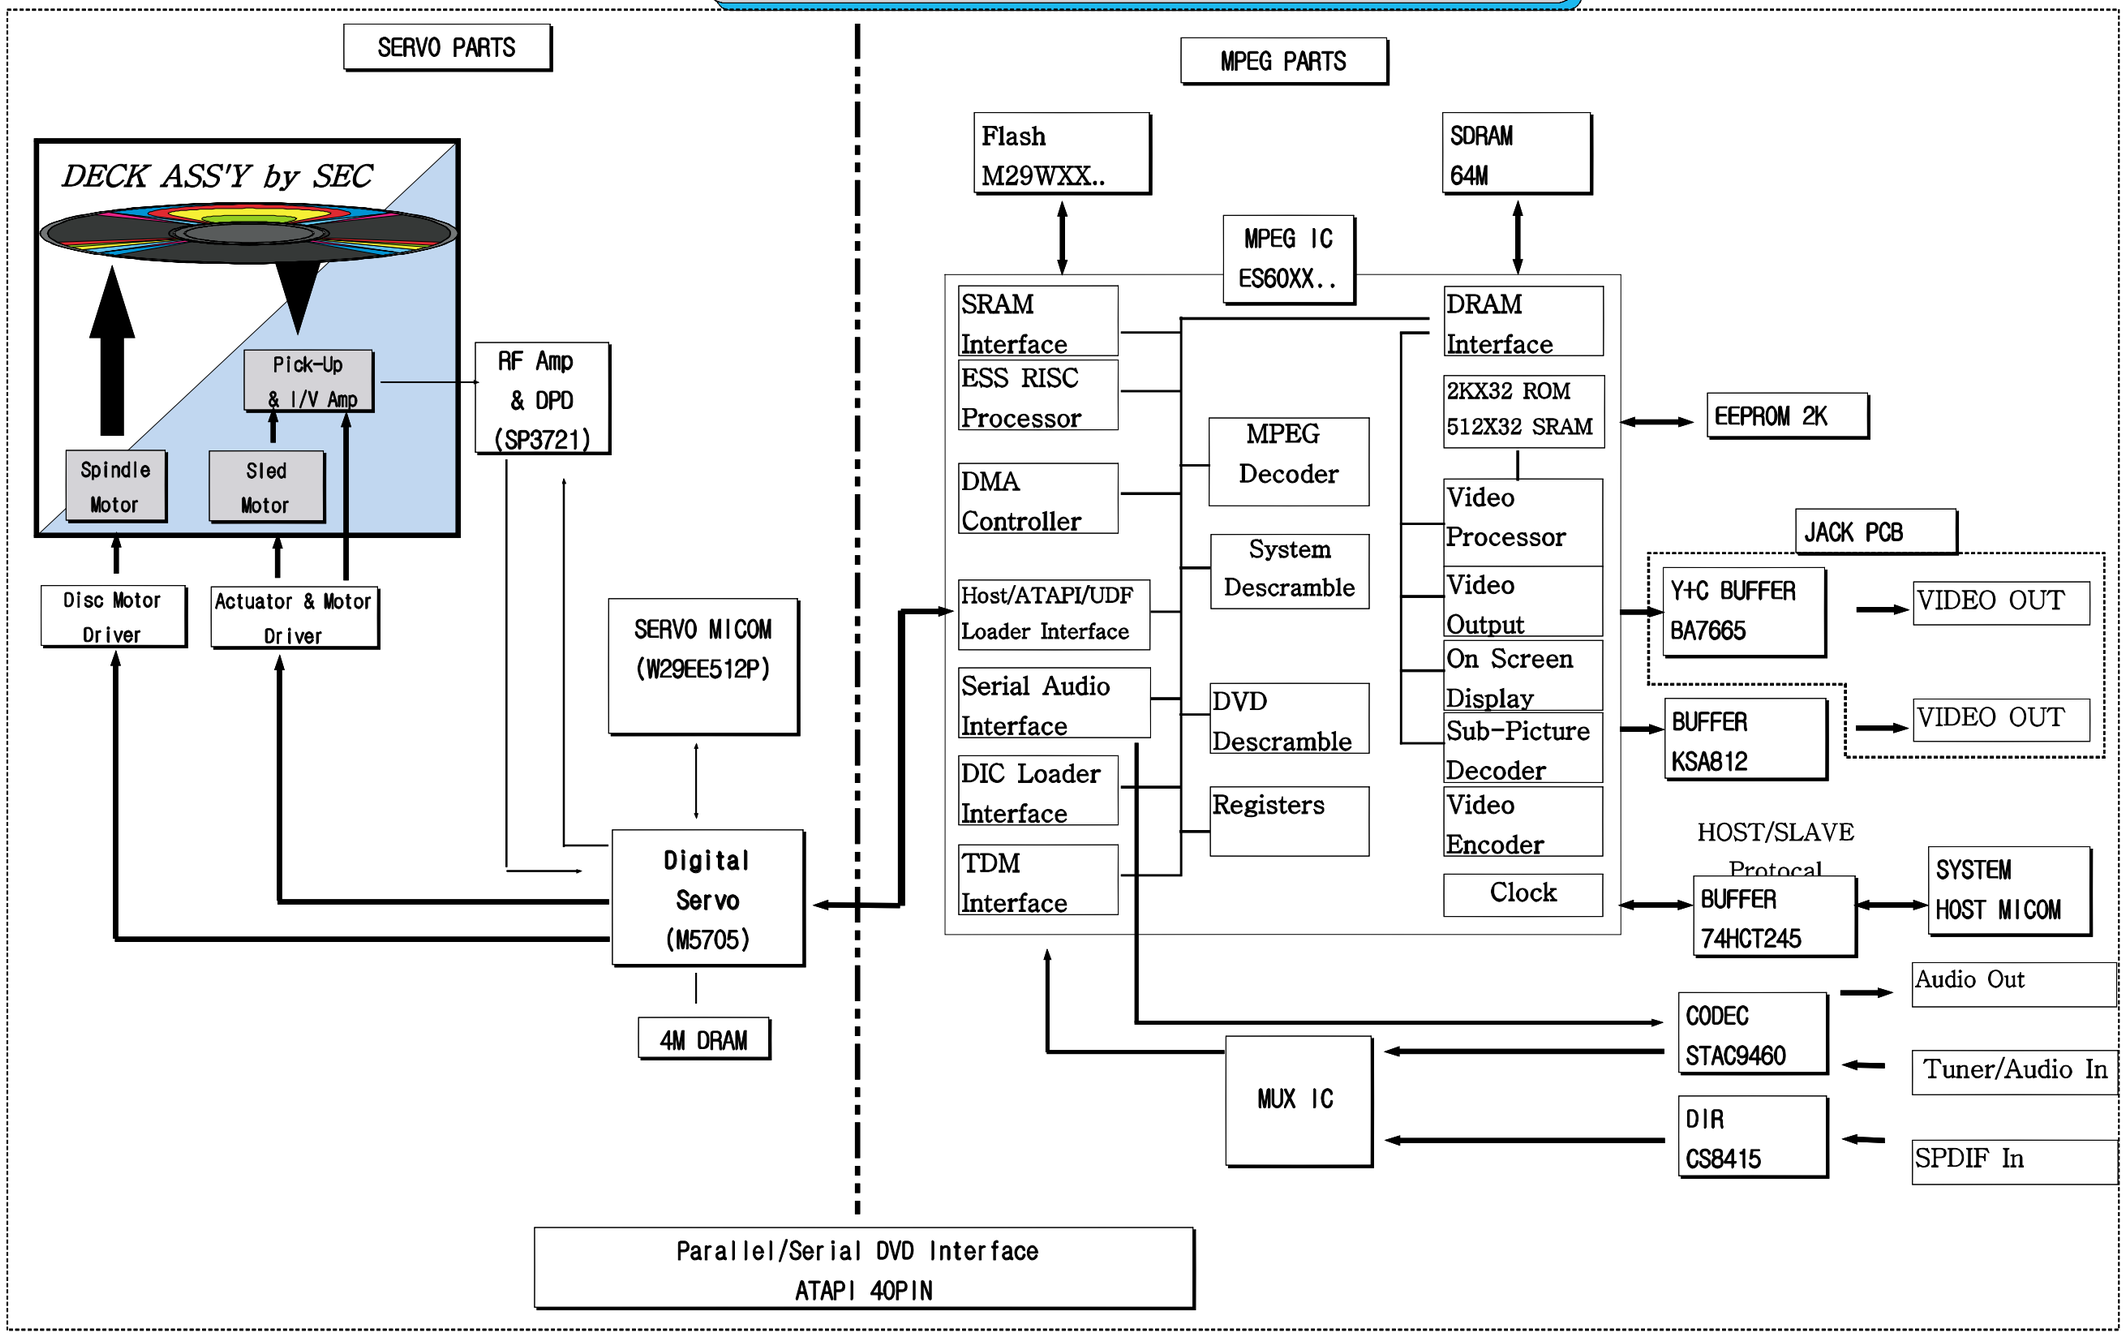
DVD BLOCK DIAGRAM